

Classroom Media Control Systems

The following rooms use a **Sanyo Remote Control**. Information on using the Sanyo remote can be found on pages 2-3.

(AH) Agnes Arnold Hall: 2,106,108,201,202,204,303,304,322

(C) Roy Gustav Cullen: 102, 105, 110

(CAM) Isabel C. Cameron: 101

(F) Lamar Fleming, JR: 160

(FH) Stephen Power Farish Hall: 211, 213, 215, 217, 218, 219, 307, 336

(GAR) Susanna Garrison Gymnasium: 118, 201

(M) Charles F. McElhinney: 105, 106, 107, 113, 115, 118, 122

(PGH) Philip Guthrie Hoffman: 347

(SW) Graduate School of Social Work: 219, 221, 229



The following rooms use an **Extron Media Control System**. Information on using the Extron controller can be found on pages 4-5.

(AH) Agnes Arnold Hall: 9, 10, 11, 12, 15, 16, 301, 302

(ARC) College of Architecture: 209, 215, 217, 402

(C) Roy Gustav Cullen: 106, 111, 113

(CAM) Isabel C. Cameron: 103, 105

(F) Lamar Fleming: 154, 160

(FH) Stephen Power Farish Hall: 222A, 232

(H) Fred J. Heyne: 34

(M) Charles F. McElhinney: 111, 117, 120


(PGH) Philip Guthrie Hoffman Hall: 343, 345

(T) Technology Annex room: 120G



Sanyo Remote Control

The rooms listed at the top of page 1 are equipped with a video/data projector controlled by a Sanyo remote (shown below), a full size podium, VHS/DVD player, a PC computer and a laptop connection. The remote is attached to the podium by a black cord.

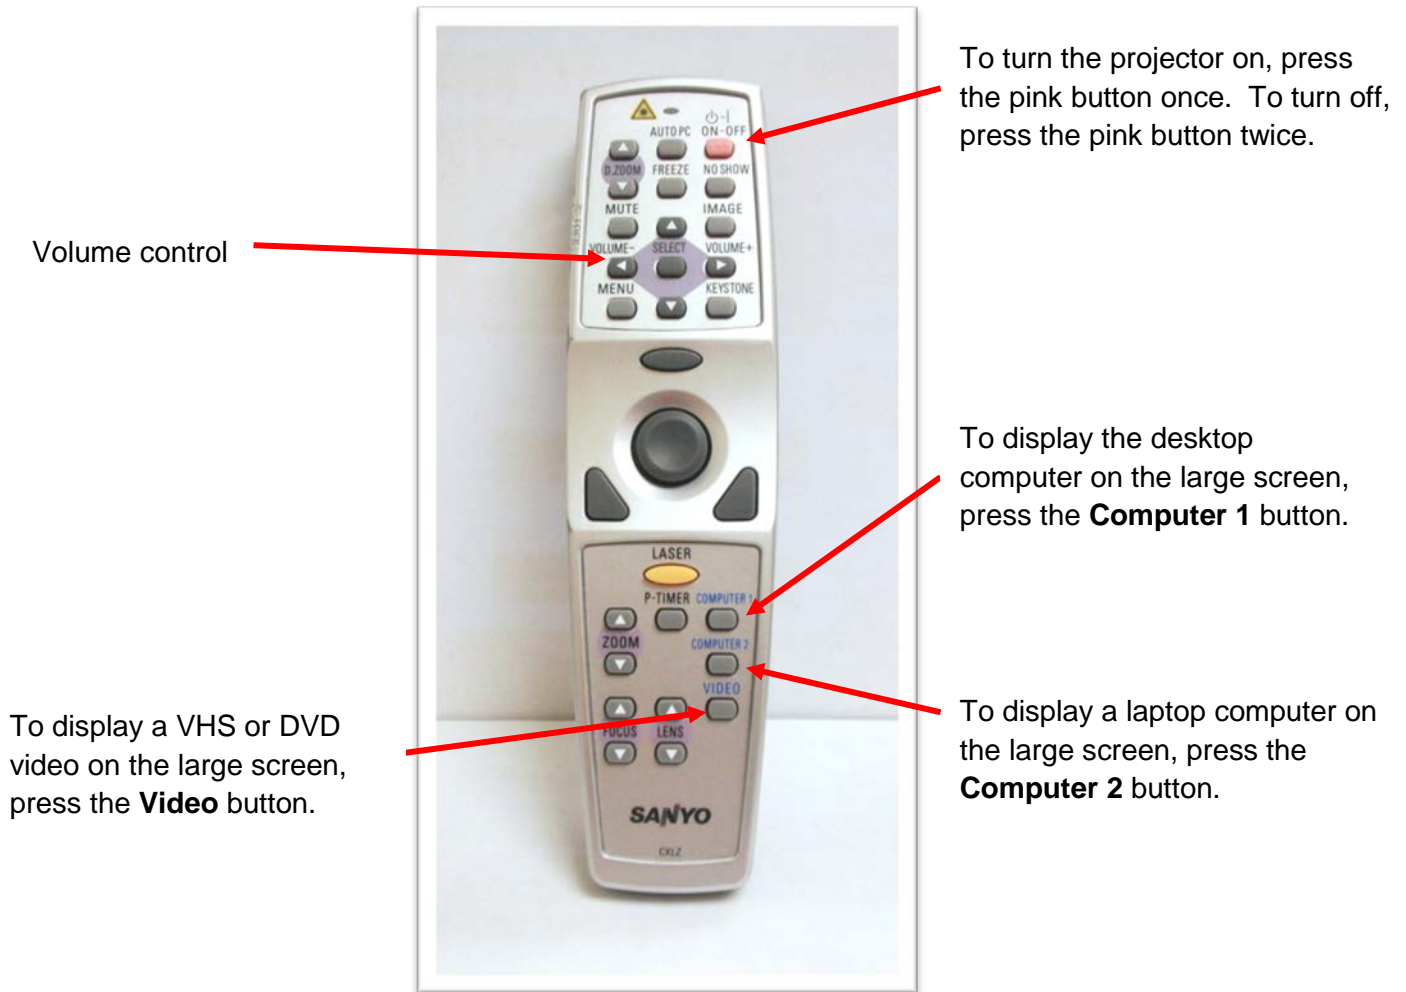

Using the Desktop Computer

To use the desktop computer located in the podium:

- 1) Turn it on using the **Power** button. After the computer boots, two icons appear on the desktop.
- 2) Double-click the **Faculty** icon.
- 3) Point the remote at the projector and press **Computer 1**.

The computer is now ready to use.

Using a Laptop

To use a laptop computer:

- 1) Plug the VGA cable (shown below) that is located on the podium into the laptop.
- 2) Turn on the laptop.
- 3) Point the remote at the projector and press **Computer 2**.

The laptop is now ready to use.



← VGA cable

Using the VHS/DVD Player

To use the VHS/DVD player:


- 1) Turn on the player using the **Power** button.
- 2) Insert a VHS tape or DVD.
- 3) Press **Play** on the player.
- 4) Point the remote at the projector and press **Video**.

Important: When you are done, please turn off the projector.

For questions or problems, call Classroom Technology at 713-743-1155 or send email tomdist@uh.edu.

Extron Media Control System

The rooms in the second list on page 1 are equipped with a video/data projector, a full size podium, VHS/DVD player, a PC computer and a laptop connection. The equipment in these rooms is controlled by an Extron Media Control System (shown below) located on the wall at the front of the classroom. The image below shows the basic functions of the Extron controller.

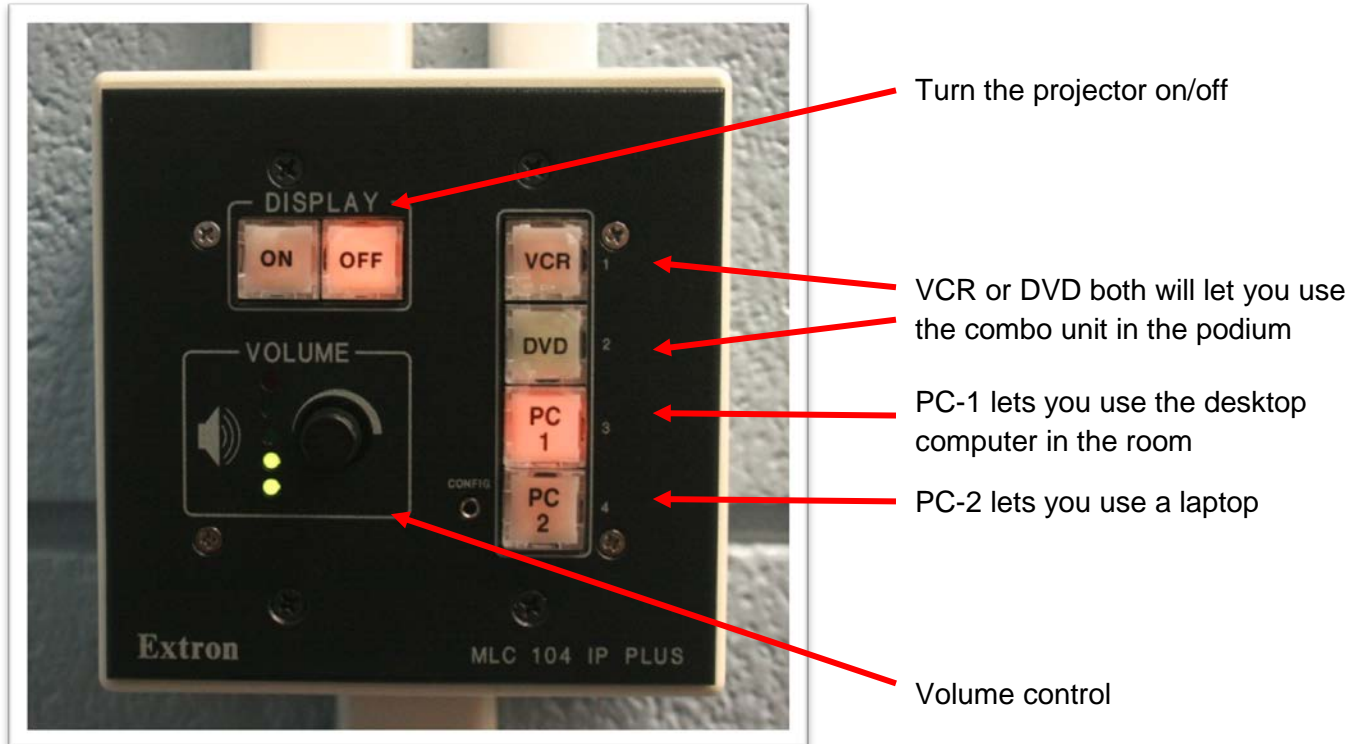

Using the Desktop Computer

To use the desktop computer located in the podium:

- 1) Turn it on using the **Power** button.
- 2) Login to the computer using your CougarNet account, or login using an account provided by Classroom Technology. Call Classroom Technology at 713-743-1155 for details.
- 3) Press **PC1** on the Extron controller.

The computer is now ready to use.

Using a Laptop

To use a laptop computer:

- 1) Plug the VGA cable (shown below) that is located on the podium into the laptop.
- 2) Turn on the laptop.
- 3) Press **PC2** on the Extron controller.

The laptop is now ready to use.



← VGA cable

Using the VHS/DVD Player

To use the VHS/DVD player:

- 1) Turn on the player using the **Power** button.
- 2) Insert a VHS tape or DVD.
- 3) Press **Play** on the player.
- 4) Press **VCR** or **DVD** on the Extron controller.

Important: When you are done, please log off the computer and turn off the projector.

For questions or problems, please call Classroom Technology at 713-743-1155 or email us at mdist@uh.edu.